

# **RIFF JTAG Error codes and troubleshooting**

## **Error code 0x47**

### **1.12. Error code 0x47**

Returned by box's firmware as status whether target is currently running or halted.  
Current code means target is running.

Unique solution ID: #1016

Author: Legija

Last update: 2012-04-28 12:57