

RIFF JTAG Error codes and troubleshooting

Error code 0x47

1.12. Error code 0x47

Returned by box's firmware as status whether target is currently running or halted. Current code means target is running.

Unique solution ID: #1016

Author: Legija

Last update: 2012-04-28 12:57