

# RIFF JTAG Error codes and troubleshooting

## **ERROR: Read/Write memory failed during H/W Init**

### **ERROR: Read/Write memory failed during H/W Init**

This error can happen due to few reasons:

- NRST or GND pins not connected properly
- Wrong model selected
- Hardware failure

Solution:

Connect NRST and GND pins properly. In case that You're trying to access officially unsupported device, contact support for correct H/W Initi settings.

Unique solution ID: #1039

Author: Legija

Last update: 2012-04-28 13:58