

# RIFF JTAG Error codes and troubleshooting

## ERROR: Set I/O Voltage failed. Real reading is "value"

**ERROR: Set I/O Voltage to "value" failed. Real reading is "value".**

Can happen due to following reasons:

- Connection with device is wrong
- Target device has developed hardware malfunction
- RIFF Box I/O voltage generator is malfunctioning

### To properly diagnose root of the problem, do the following:

- Disconnect ribbon cable from RIFF Box and press any function button. In case that box internal I/O voltage generator is malfunctioning, You'll receive same error:

Connecting to the dead body...ERROR

ERROR: Set I/O Voltage to 2.80V failed. Real reading is 3.86V

In case that box is okay, error will be gone:

Connecting to the dead body...ERROR

ERROR: The RTCK Signal does not respond.

Unique solution ID: #1041

Author: Legija

Last update: 2012-04-28 14:43