
eMMC Read/Write tab

How to read eMMC backup using RIFF Box JTAG Manager software


For start, click "eMMC Read/Write" tab on JTAG Manager software:

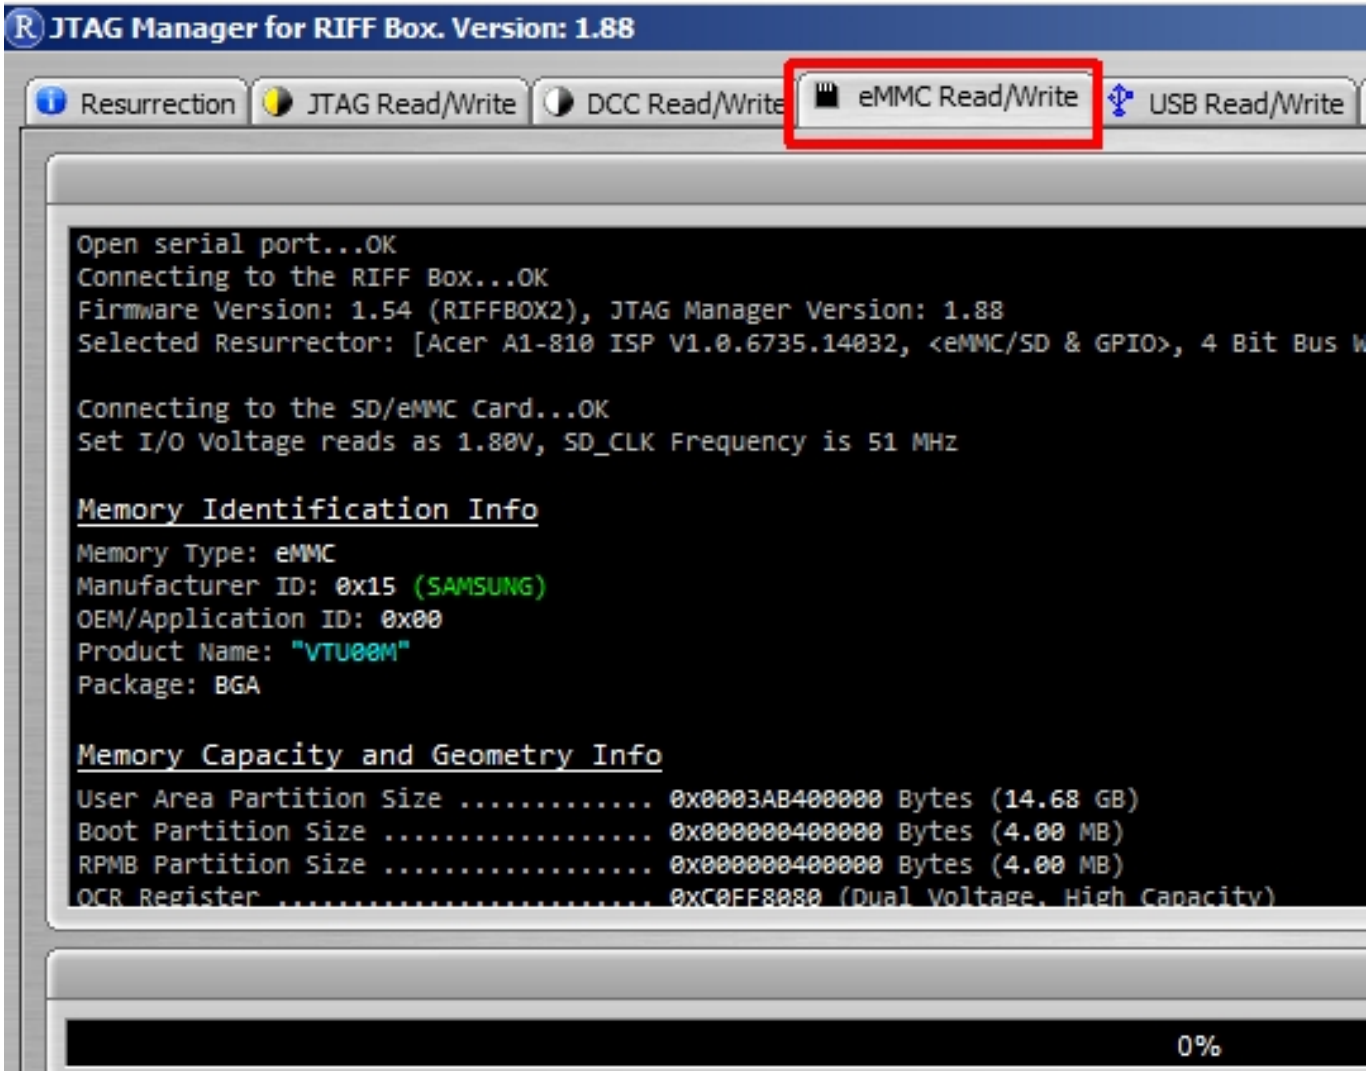

Click "Check eMMC/SD Card", software will read information from chip:

(c) 2026 Legija <> | 2026-11-23 06:16
URL: https://faq.riffbox.org/content/12/76/en/how-to-read-emmc-backup-using-riff-box-jtag-manager-software.html


eMMC Read/Write tab

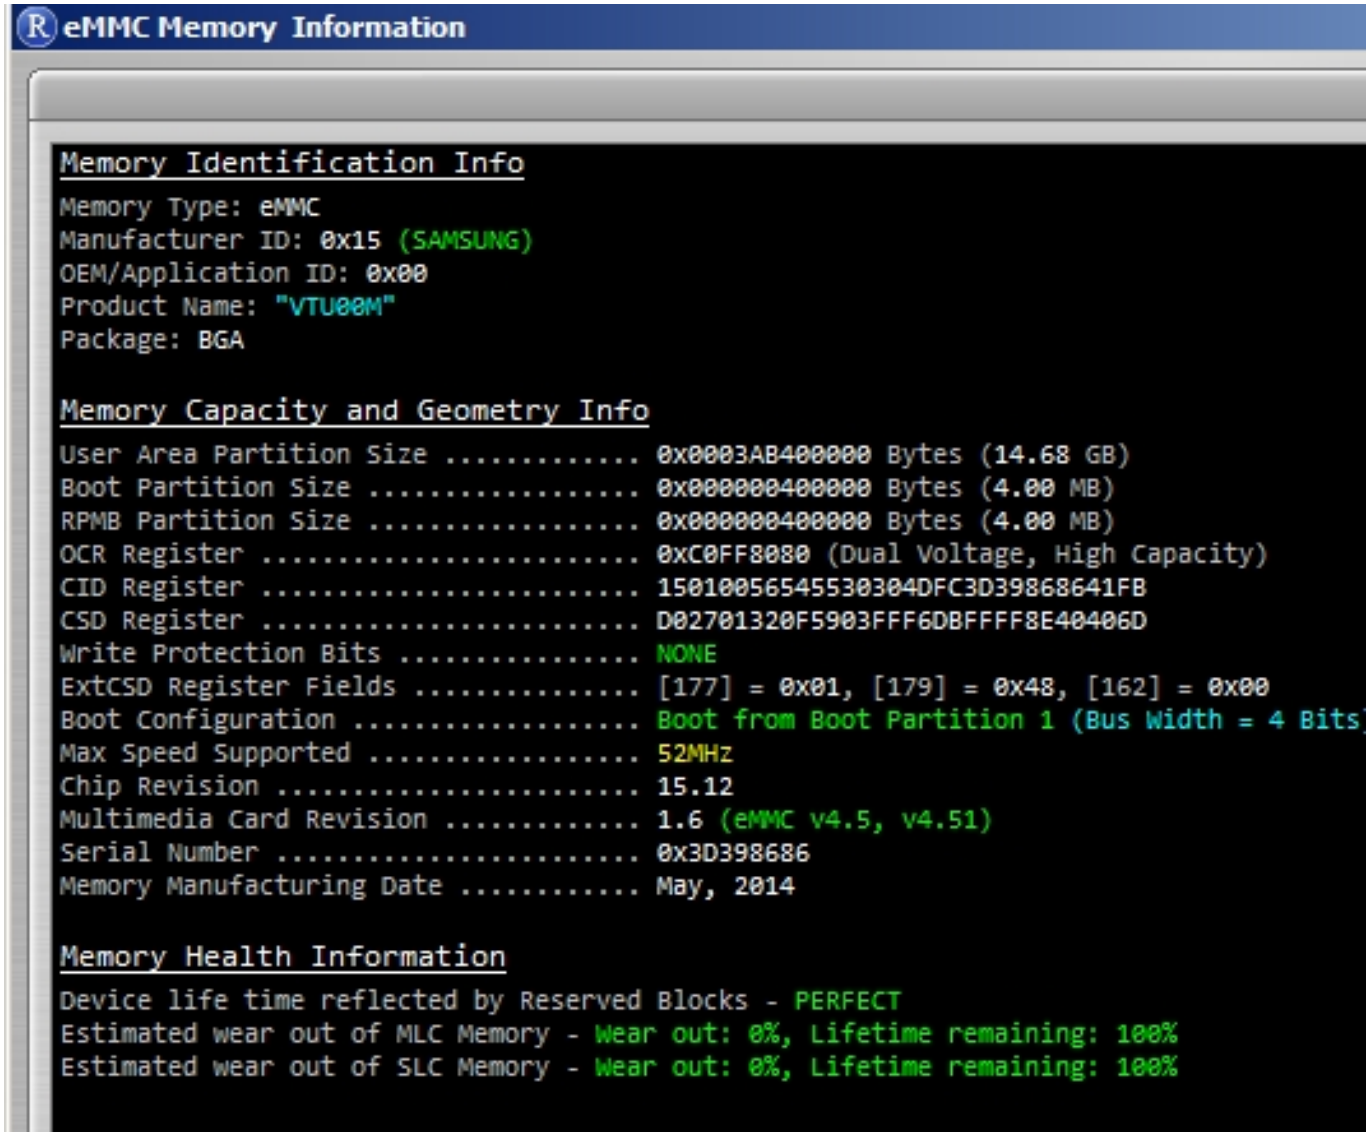

To read data from chip, we need input parameters:
- Physical partition:


(c) 2026 Legija <> | 2026-11-23 06:16
URL: https://faq.riffbox.org/content/12/76/en/how-to-read-emmc-backup-using-riff-box-jtag-manager-software.html

eMMC Read/Write tab

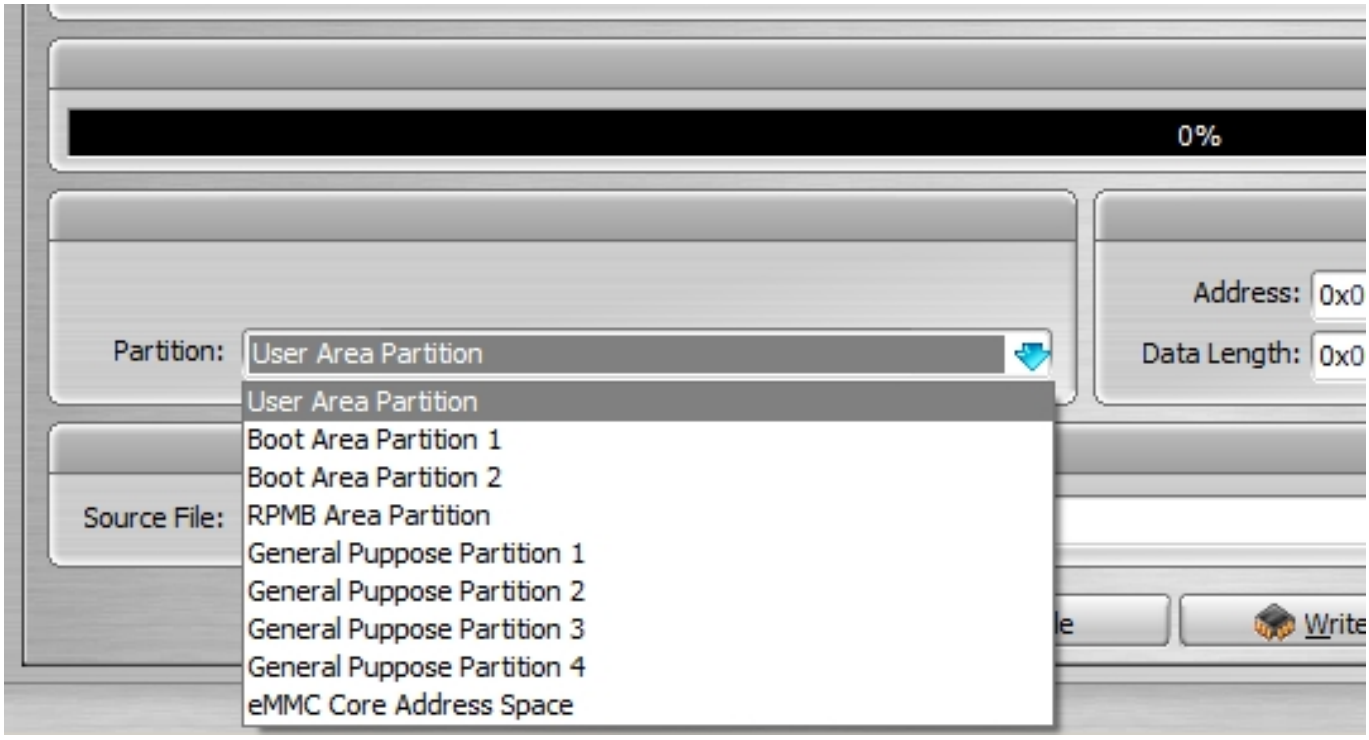

- Start Address
- Data Length


If we want to read specific size, we can use presets (from 1MB to 16GB) or use auto fullflash size option:

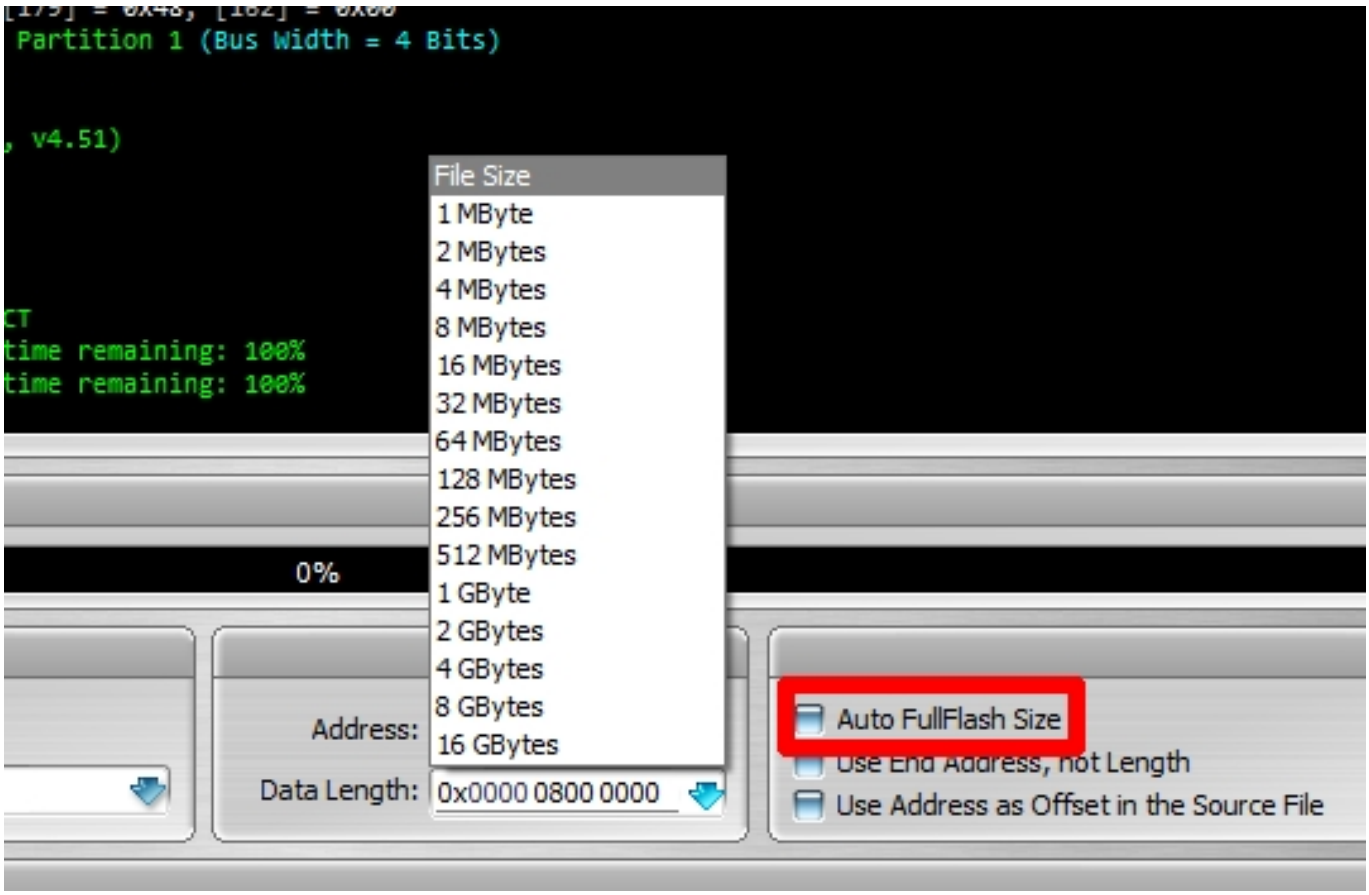

(c) 2026 Legija <> | 2026-11-23 06:16
URL: https://faq.riffbox.org/content/12/76/en/how-to-read-emmc-backup-using-riff-box-jtag-manager-software.html

eMMC Read/Write tab

Now we simply click "Read eMMC/SD" and after reading is finished we can save data to a file (Save to file) or hold shift key to use "Show hex data" option:

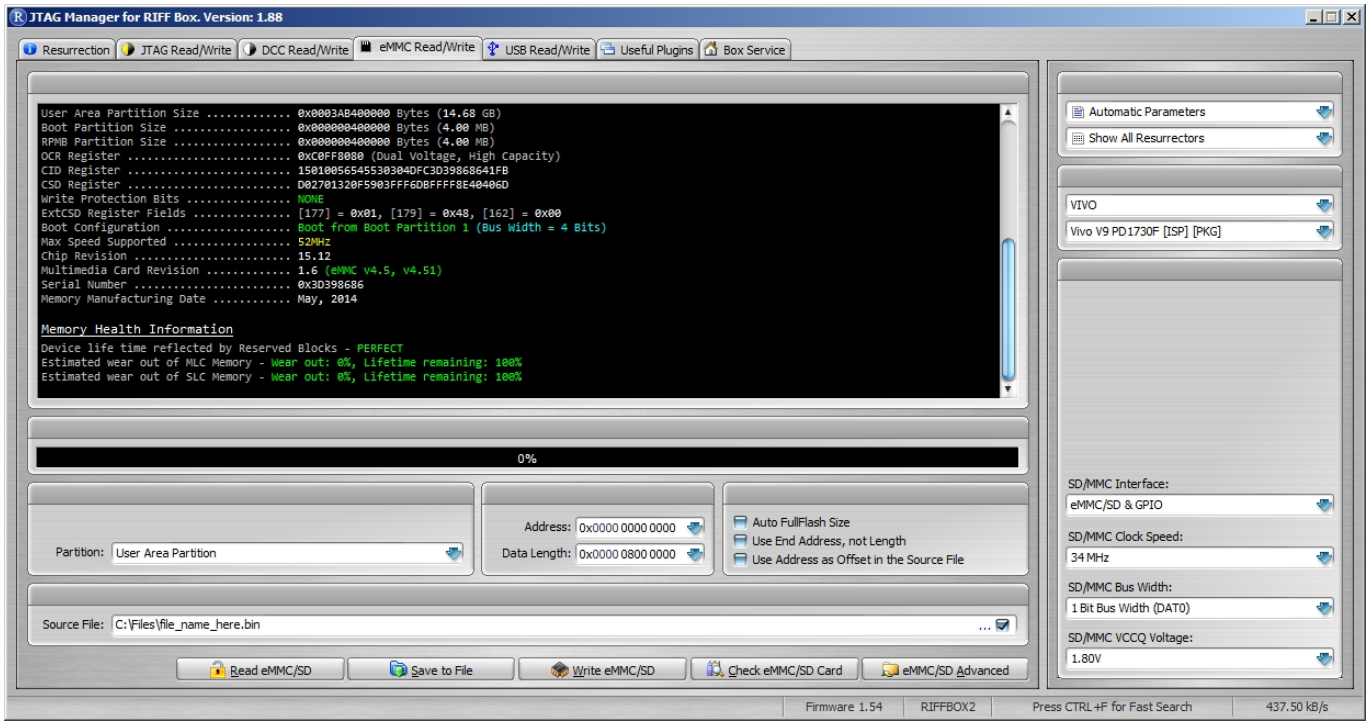

Unique solution ID: #1075
Author: Legija
Last update: 2020-06-05 14:06

(c) 2026 Legija <> | 2026-11-23 06:16
URL: https://faq.riffbox.org/content/12/76/en/how-to-read-emmc-backup-using-riff-box-jtag-manager-software.html