

# **RIFF JTAG Error codes and troubleshooting**

## **ERROR: Failed due to multiple communication errors.**


### **ERROR: Failed due to multiple communication errors.**

This error is returned in case that connection between box and target device is unstable.


- Badly connected/soldered
- Bad ribbon cable
- RTCK/TCK sampling rate too high
- In rare cases, target device is malfunctioning, or it's powered off.

First (and easiest) solution to try is to lower down the sampling rate:

# RIFF JTAG Error codes and troubleshooting

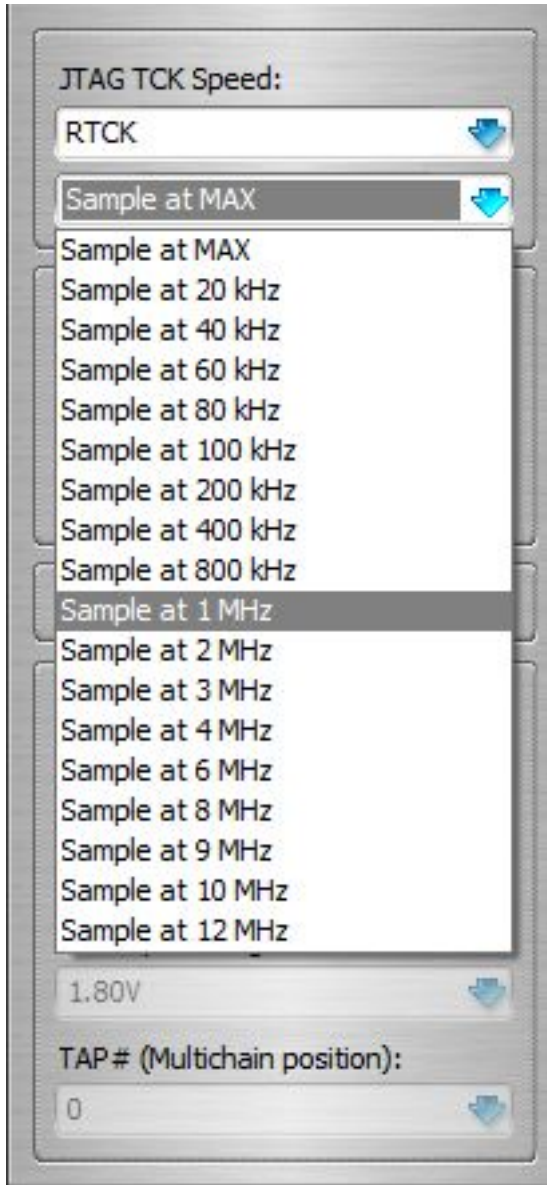

# RIFF JTAG Error codes and troubleshooting

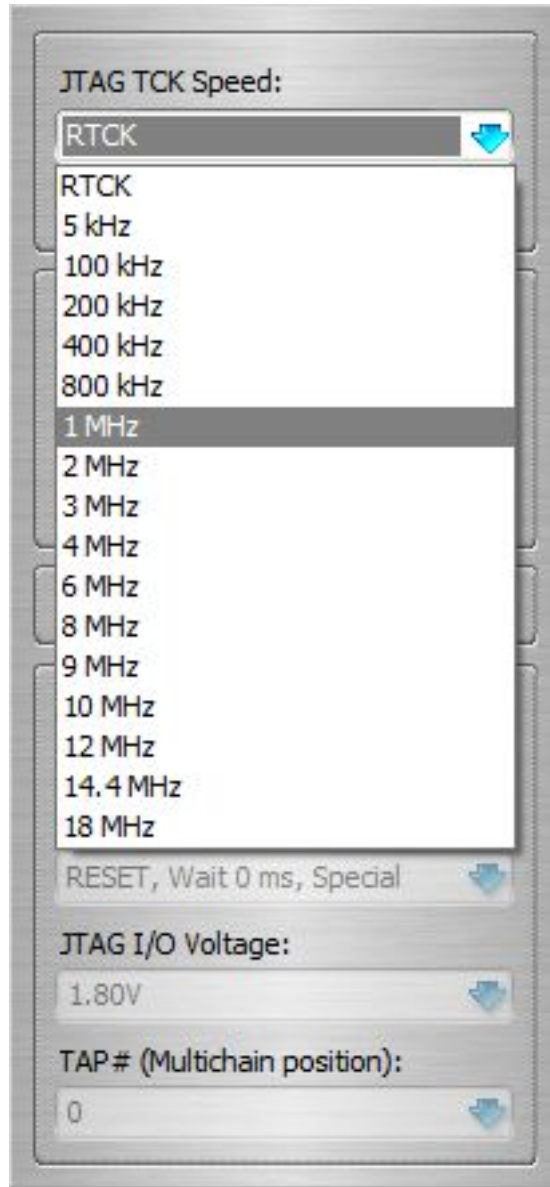

If this doesn't help, user should check connection cables/soldering/JIG.

Unique solution ID: #1059

Author: Legija

Last update: 2012-05-07 18:26